


INSTRUCTIONS FOR ASSEMBLING TRADITIONAL CHIMNEY STACKS

• Preliminary check

Check that the base of the chimney stack is compatible (i.e. bigger than) the chimney flue, and that the chimney flue itself is solidly assembled. After this, you may begin to assemble the chimney stack.

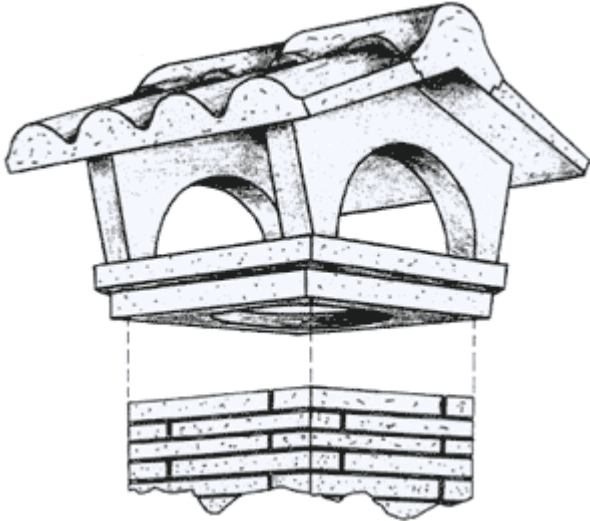

• Assembly

In order to assemble the chimney stack, you need to use fine mortar or glue for tiles for the joints.

Put a sufficient layer of adhesive material on the upper edge of the chimney flue. Position the base of the chimney stack on top. Then position the two arches and fill the ready-made holes for the two steel rods with mortar too. When the adhesive is still wet, check the distance between the arches by putting the bent tile support (Castello model) or the fake bent side tiles (Domus model) in place. After this, you can immediately put the central part of the Domus model roof in place or, for the Castello model, start to assemble the bent tiles (or roof tiles or other).

- If you wish to insert a bird protection net, insert it at an angle between the two arches, then make it vertical. Then by pulling the two jointed sides, it opens up into a rectangle shape which is blocked at the sides between the top wall of the chimney stack and the base. For greater stability, you can fasten the net to the arches with steel wire.

In bad weather conditions, you must underpin the chimney stack until the adhesive has taken hold.

N.B.: Remember that the chimney stack needs to undergo periodical maintenance (at least once a year, but preferably more often) to check that there are no blockages and that no parts have become detached due to frost or any other reason.